

SAFETY PRECAUTIONS

Important Notes

- * This safety and operating instruction should be retained for future reference.
- * The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- * Avoid installing the unit in locations described below:
 - Places exposed to direct sunlight or close to heat radiating appliances such as electric heaters.
 - On top of other stereo equipment that radiate too much heat.
 - Places blocking ventilation or dusty places.
 - Places subject to constant vibration.
 - Humid or moist places.
- * No naked flame sources such as lighted candles should be placed on the apparatus;
- * Attention should be drawn to the environmental aspects of battery disposal;
- * Minimum distances around the apparatus for sufficient ventilations is 10cm;
- * The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains, etc.
- * The use of apparatus in moderate climates.
- * Operate controls and switches as instructed in the manual.
- * Before turning on the power for the first time, make sure the power cord is properly installed.

For safety reasons, do not remove any covers or attempt to gain access to the inside of the product. Refer any servicing to qualified personnel.



CAUTION
RISK OF ELECTRIC SHOCK



CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



DANGEROUS VOLTAGE

Dangerous voltage, that may be of sufficient magnitude to constitute a risk of electric shock to persons is present within this product's enclosure.

ATTENTION


The owner's manual contains important operating and maintenance instructions, for your safety, it is necessary to refer to the manual.

WARNING : TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO DRIPPING OR SPLASHING.

Note:

This unit will become warm when used for a long period of time. This is normal and does not indicate a problem with the unit.


FEATURES AND CONTROLS

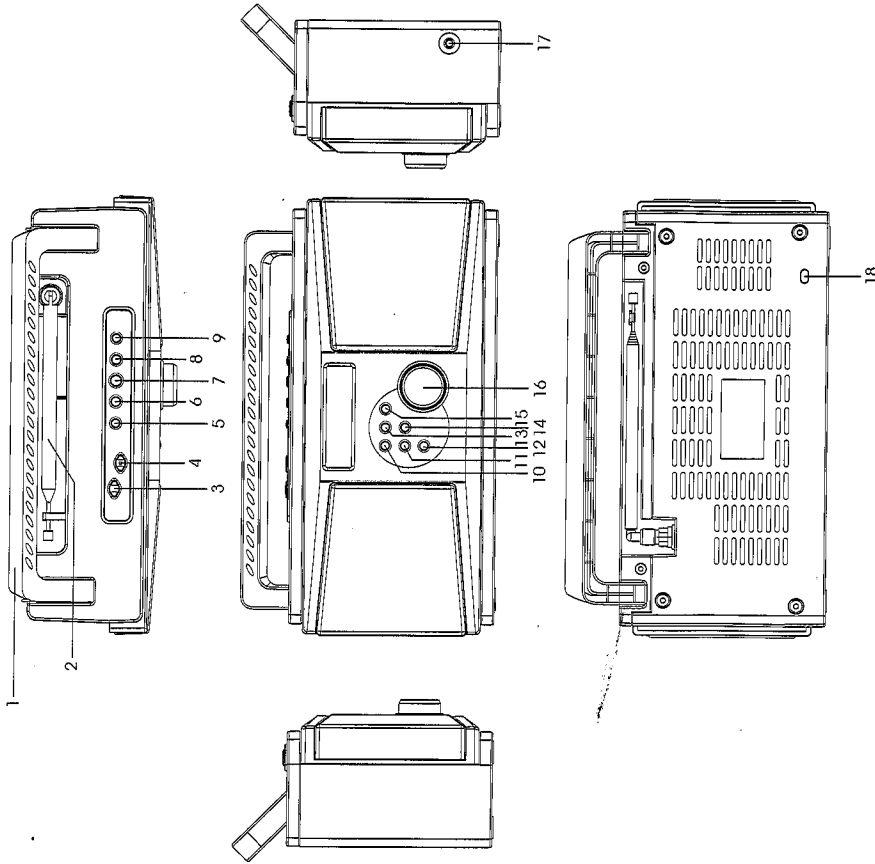

1. HANDLE
2. ROD ANTENNA
3. STANDBY BUTTON
4. DAB/FM BUTTON
5. PRESET 1 BUTTON
6. PRESET 2 BUTTON
7. PRESET 3 BUTTON
8. PRESET 4 BUTTON
9. PRESET 5 BUTTON
10. SELECT DOWN BUTTON
11. INFO BUTTON
12. AUTOTUNE BUTTON
13. SELECT BUTTON
14. SLEEP BUTTON
15. SELECT UP BUTTON
16. VOLUME KNOB
17. HEADPHONE JACK
18. AC POWER CORD

SWITCHING YOUR RADIO ON FOR THE FIRST TIME

When the radio is connected to the power for the first time, the display backlight will be on for a few seconds, the display will first show a greeting and then the clock. Press the **STANDBY** button once to turn the radio on, DAB will be automatically selected and perform a auto tune quick scan function.(F1)(F2)(F3)

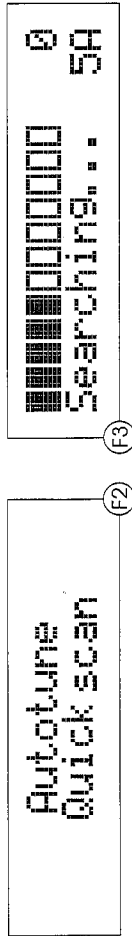

LISTENING TO YOUR RADIO

DAB MODE


If the radio is connected to the power and then switched on from standby for the first time, the radio will automatically enter into the DAB auto tune full scan mode. During this mode, the display will show a slide bar to indicate the progress of the scan.

Unlike normal radio, the separate signals from a number of stations are grouped together and transmitted in a single frequency, these groups are referred to as multiplexes and ensembles. Every time one of these groups has been found, the name of that group will be displayed on the bottom half of the display.

Autotune modes


There are two types of auto tune modes, one is quick scan and the other is full scan. Quick scan will only search for the UK DAB Band III channels and full scan will search all DAB Band III channels. Once the scan has finished, the radio will select the first alphanumerically found station.

1. To activate the quick scan, press the **AUTOTUNE** button once, the display will show "Autotune Quick scan" and then a progressing slide bar and "Searching..." (F4)
2. To activate full scan, press and hold the **AUTOTUNE** button until the display shows "Autotune Full scan" (F5)
3. To explore the stations that have been found, press the **UP** or **DOWN** button.

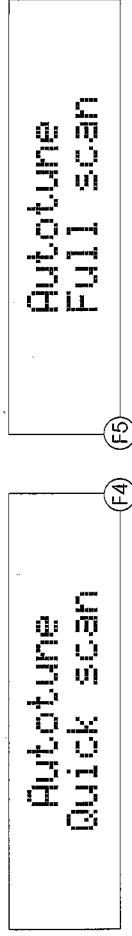

Manual tuning


1. To select manual tuning, press and hold the **SELECT** button until the display shows "Manual tune" (F6)
2. Press the **UP** or **DOWN** button to move through the DAB channels, on the top half of the display will show "5A To 13F" and their associated frequencies. When your radio locates a station group (ensemble/multiplex) on one of the DAB channels, the name of the station group will appear on the bottom half of the display.(F7)
3. To enter the ensemble/multiplex, press the **SELECT** button, the top half of the display will show the first station in the ensemble/multiplex.
4. Press the **UP** or **DOWN** button to see what stations are present on the found ensemble/multiplex, when you have located your desired station, press the **SELECT** button, and at the same time, you will also exit from the manual tuning mode.

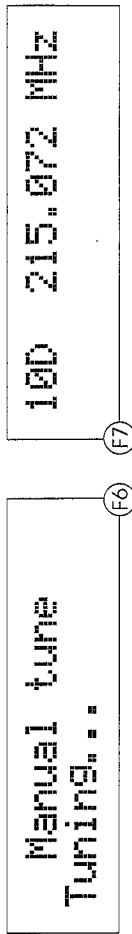

Auto select on /off


You can explore the found stations by pressing the **UP** or **DOWN** button, if the auto select is "ON", the station will be automatically selected when the button is released, and the name of the station will be displayed. If the auto select is "OFF", you have to press the **SELECT** button to switch to that station when the display shows your desired station, otherwise it will revert back to the original station after 4 seconds.

To toggle between the auto select "ON" and "OFF", press the **UP** or **DOWN** button and then quickly press and hold the **SELECT** button until the display shows the "Autoselect ON" or "Autoselect OFF" (F8)(F9)

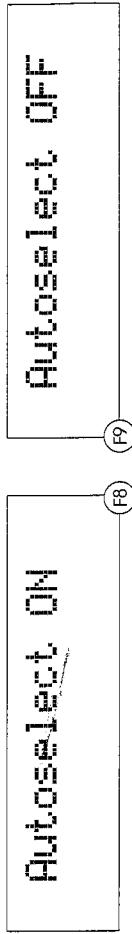

FM MODE

1. To select FM, press the **DAB/FM** button, the display will show "Switching to FM" and it will automatically tune to the nearest station. The top half of the display will show the station name or frequency if RDS is not available.(F10)(F11)

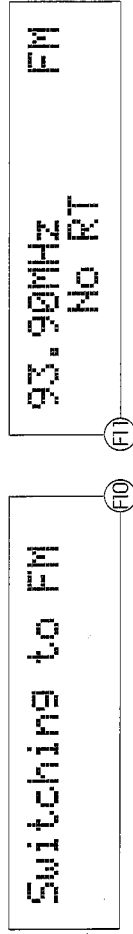


2. To activate auto search up, press the **AUTOTUNE** button, it will start scanning up the frequency band and stop automatically once a station has been found.
3. To activate auto search down, press and hold the **AUTOTUNE** button until it starts to scan down the frequency band.
4. To activate manual search, press the **UP** or **DOWN** button.
5. To select audio mode, press the **SELECT** button, "Audio mode" will be displayed, again press the **SELECT** button to toggle between "Auto" or "Mono" selection.

Note: The radio will automatically switch between stereo and mono mode, but you can override this and switch this function manually which is helpful for poor signal reception.

MATSUI

Simple DAB/FM Digital Radio

DABR101P

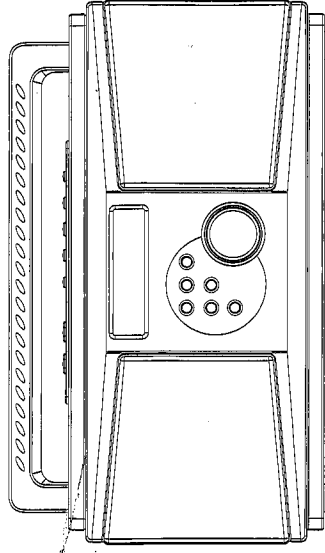

INSTRUCTIONS MANUAL

